

Installation & Owner Manual

LED Exterior Wall Light

ORBIT
— LIGHTING

Product & Technical Information

Model: OWLSRT10LG

Supply: 220-240V ~ 50Hz

Lamp: 10W LED

Ingress Protection: IP44

Use: Indoor & Outdoor (Permanent use)


Operating Position: Rigid Vertical surface

Safety Warnings

- Always read the instructions carefully before installation, failure to do this could result in damage to the product, property or harm to the installer.
- This product must be installed by a licensed electrician in accordance with the Australian / New Zealand Wiring Rules AS/NZS 3000.
- It is recommended that this product be used on a circuit board protected by an Earth Leakage Circuit Breaker or Safety Switch.
- Allow suitable ventilation around the light fitting and do not cover with any material.
- Do not immerse any part of the light fitting in water or any other liquids.
- Regularly inspect the light fitting to ensure that no damage has occurred, if damage is found cease use and replace.
- Do not attempt to modify this fitting in any way.
- The LED Driver is not replaceable.

Installation Procedure

- Ensure power to the circuit is isolated for the duration of the installation.
 - Ensure all packaging materials are fully removed prior to installation.
1. Select the appropriate mounting position.
 2. Remove the diffuser carefully by lifting the outer die cast aluminium cover, then remove the 4 screws and lift the plastic cover.
 3. Use the base as a template to mark the appropriate mounting holes, once done fit the base to the surface accordingly.
 4. Refit the diffuser ensuring the rubber gasket is firmly seated in position

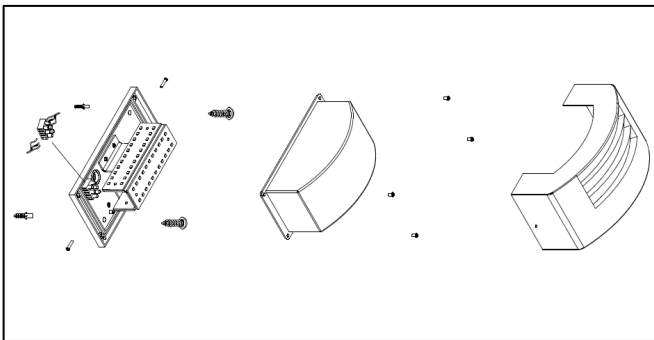

5. Please ensure that any connection made complies with New Zealand Electrical Wiring Rules AS/NZS 3000.
6. Do not swap the LED Driver for any other model, it is specific to this model.
7. Energise the circuit at the mains then turn the individual switch 'ON'.
8. Your light fitting should now operate.

Care and Cleaning

- Prior to any cleaning or maintenance ensure the power is off at the wall switch and the luminaire is cool.
- To clean wipe exterior with a damp cloth.

Proof of Purchase

Please retain your purchase receipt for all warranty claims.

Warranty

Your product is warranted against faults and manufacture when used in normal domestic use for a period of one year.

We undertake to replace this product at no charge if found to be defective due to a manufacturing fault during the warranty period. This warranty excludes damage caused by misuse, neglect, shipping accident, incorrect installation, or work carried out by anyone other than a qualified electrical service technician.

If your product fails to operate satisfactorily, please return it to the retailer from whom it was purchased to obtain a repair or replacement product. You will need to produce satisfactory evidence of date of purchase. If the product is to be replaced (cannot be repaired) then that replacement will be of the same or similar product or accessory excluding packaging, instruction card etc.

In New Zealand product is covered by the Consumers Guarantee Act (1993). In accordance with the act consumers are advised that: The manufacturer does not undertake that repair facilities and parts are necessarily available for this product.

In Australia, our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

New Zealand
PO Box 100-707
N.S.M.C
Auckland

Phone +64 (0)9 917 4000
Phone 0800 232 633
info@cdb.co.nz

Australia
PO Box 574
South Morang
Victoria, 3752

Phone +61 (0)3 9336 4423
Phone 1300 465 324
info@cdbgoldair.com.au